



How to Find the Roll Out Switch

When your fryer displays a “Heat Failure” error there are switches located behind the door of the fryer you will want to try resetting. The images below show you where to locate the Roll Out Switch.

WARNING: *These switches are located near the burners so make sure your fryer has had time to cool before attempting to reset the High Limit or Roll Out switch.*

Roll Out Switch

Locate the Switch

Roll Out Switch



Press the Button



1. Open up the fryer door and locate the tops of the burners.
2. The Roll Out Switch is located near the top of the burners inside the fryer.
3. Reach your hand on the roll switch until you feel the button.
4. Push the button down and release. You have now reset the Roll Out Switch.